



Body Dryer

the complete all over body-dry system

user guide

contents


airBody Dryer	3
Overview	4
Specification	5
Installation	6 & 7
Remote Installation and Maintenance	8
Operation	9
Safety and Guarantee	10
Contact Details and Guarantee Form	11

Please read this user guide carefully as it contains important information for the safe installation, use and maintenance of the body dryer.

This user guide should be kept in a safe place for your future use. If the body dryer is transferred, ensure this user guide remains with the dryer.





Advice Line 09 411 7975



The airBody Dryer is a breakthrough product, revolutionising the way you dry yourself. Its simplistic, hygienic and a joy to use. It is produced to the highest of British quality and passes the strictest of control procedures to ensure you have the best results.


The airBody Dryer fits conveniently into the corner of a wet room or shower cubicle

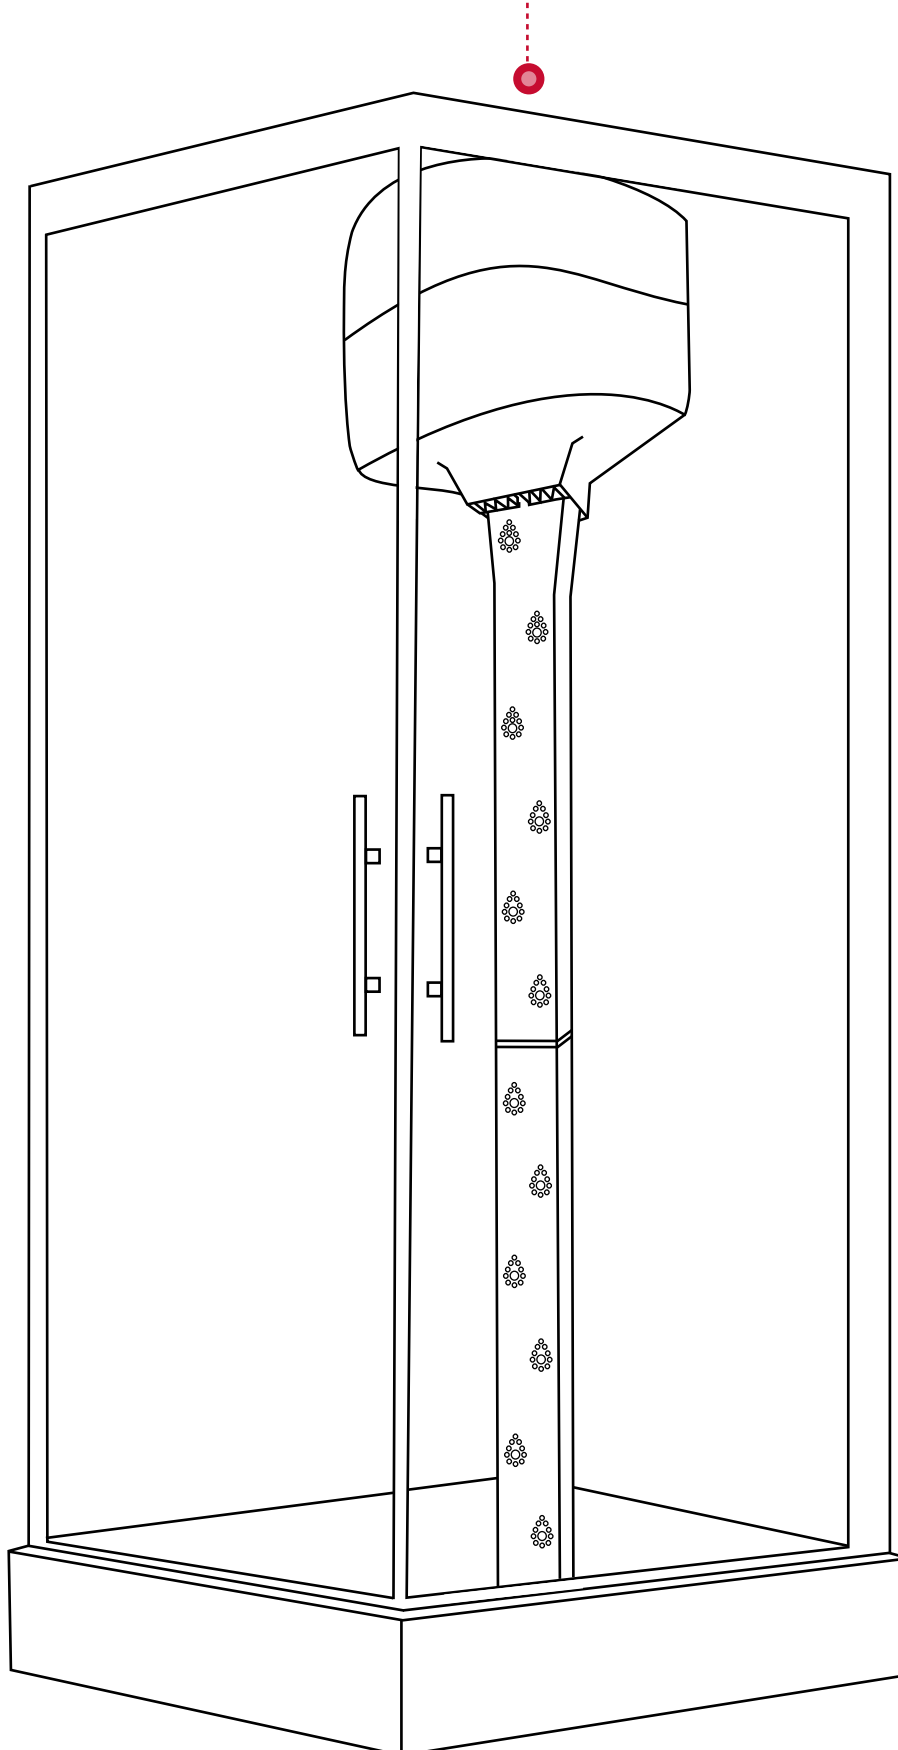

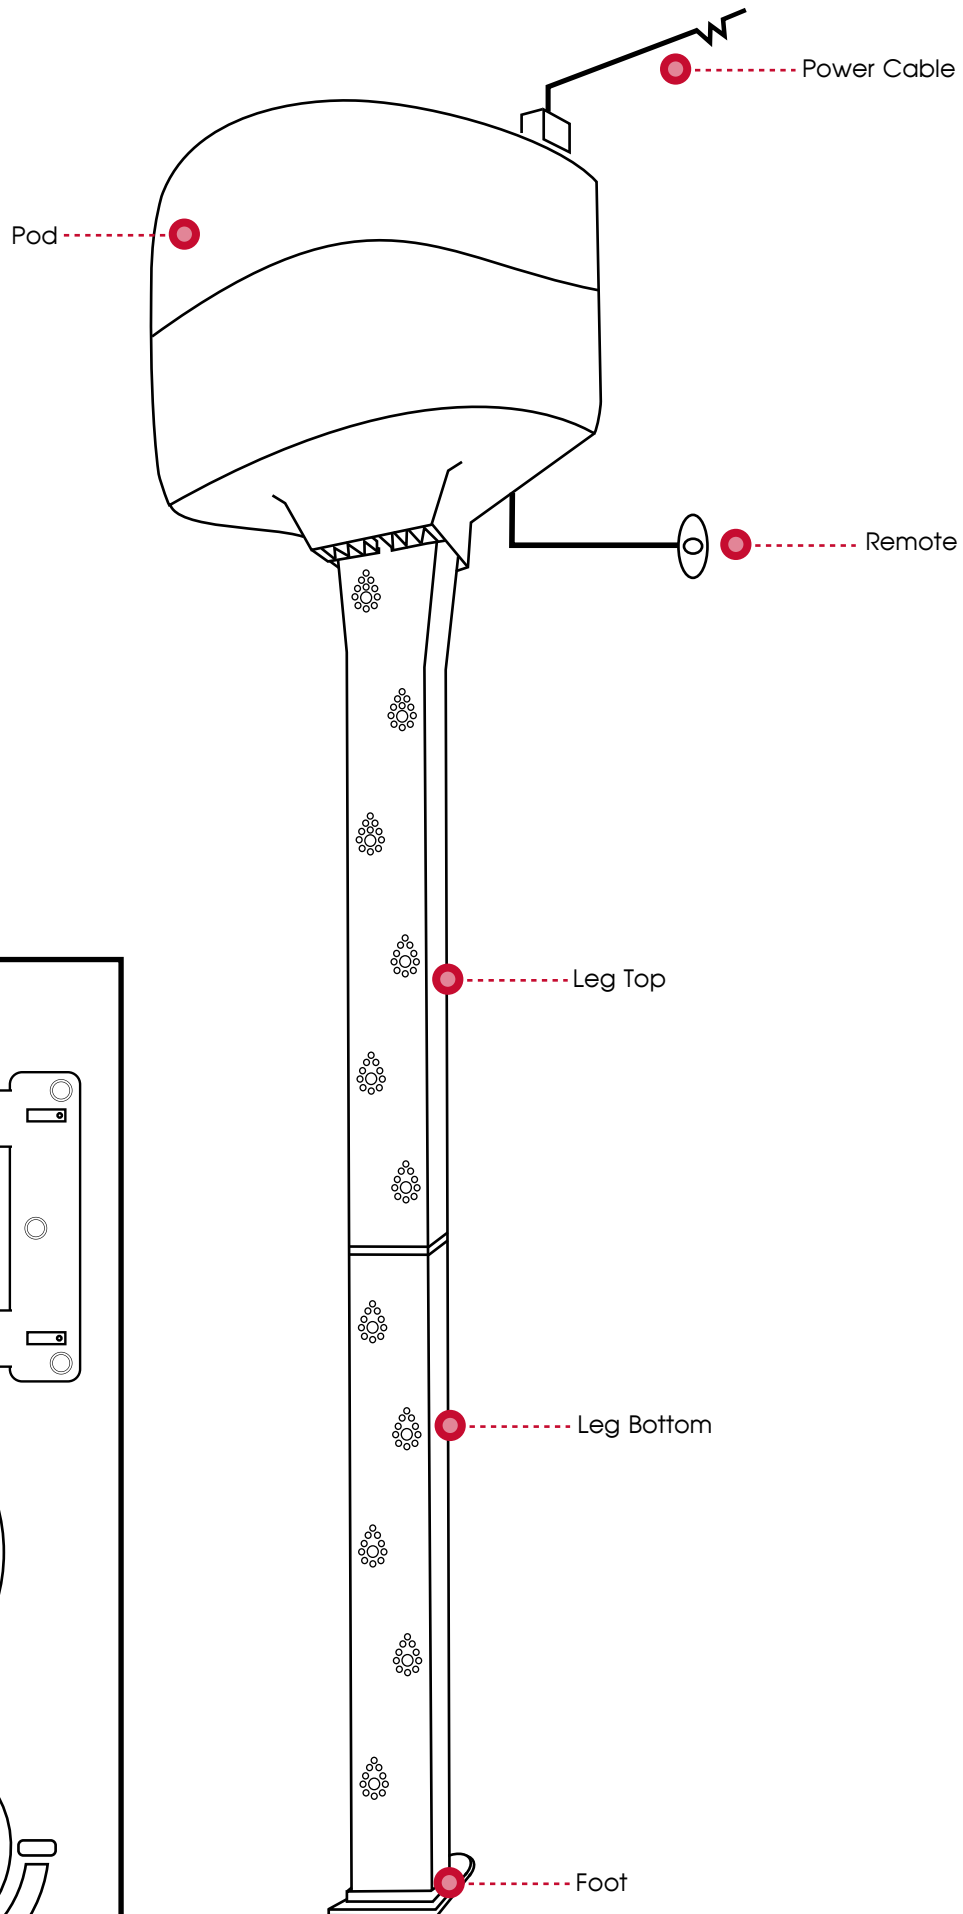


Also in this box:


Blinds, Foot And Bracket

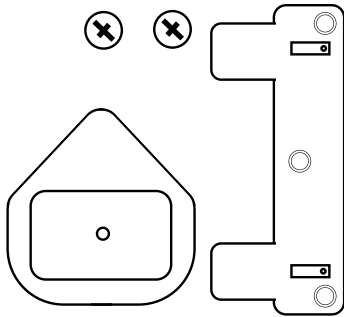



Remote

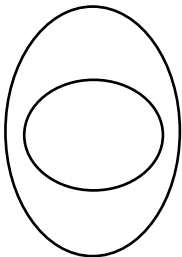

PVC Hose

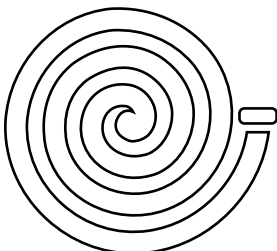

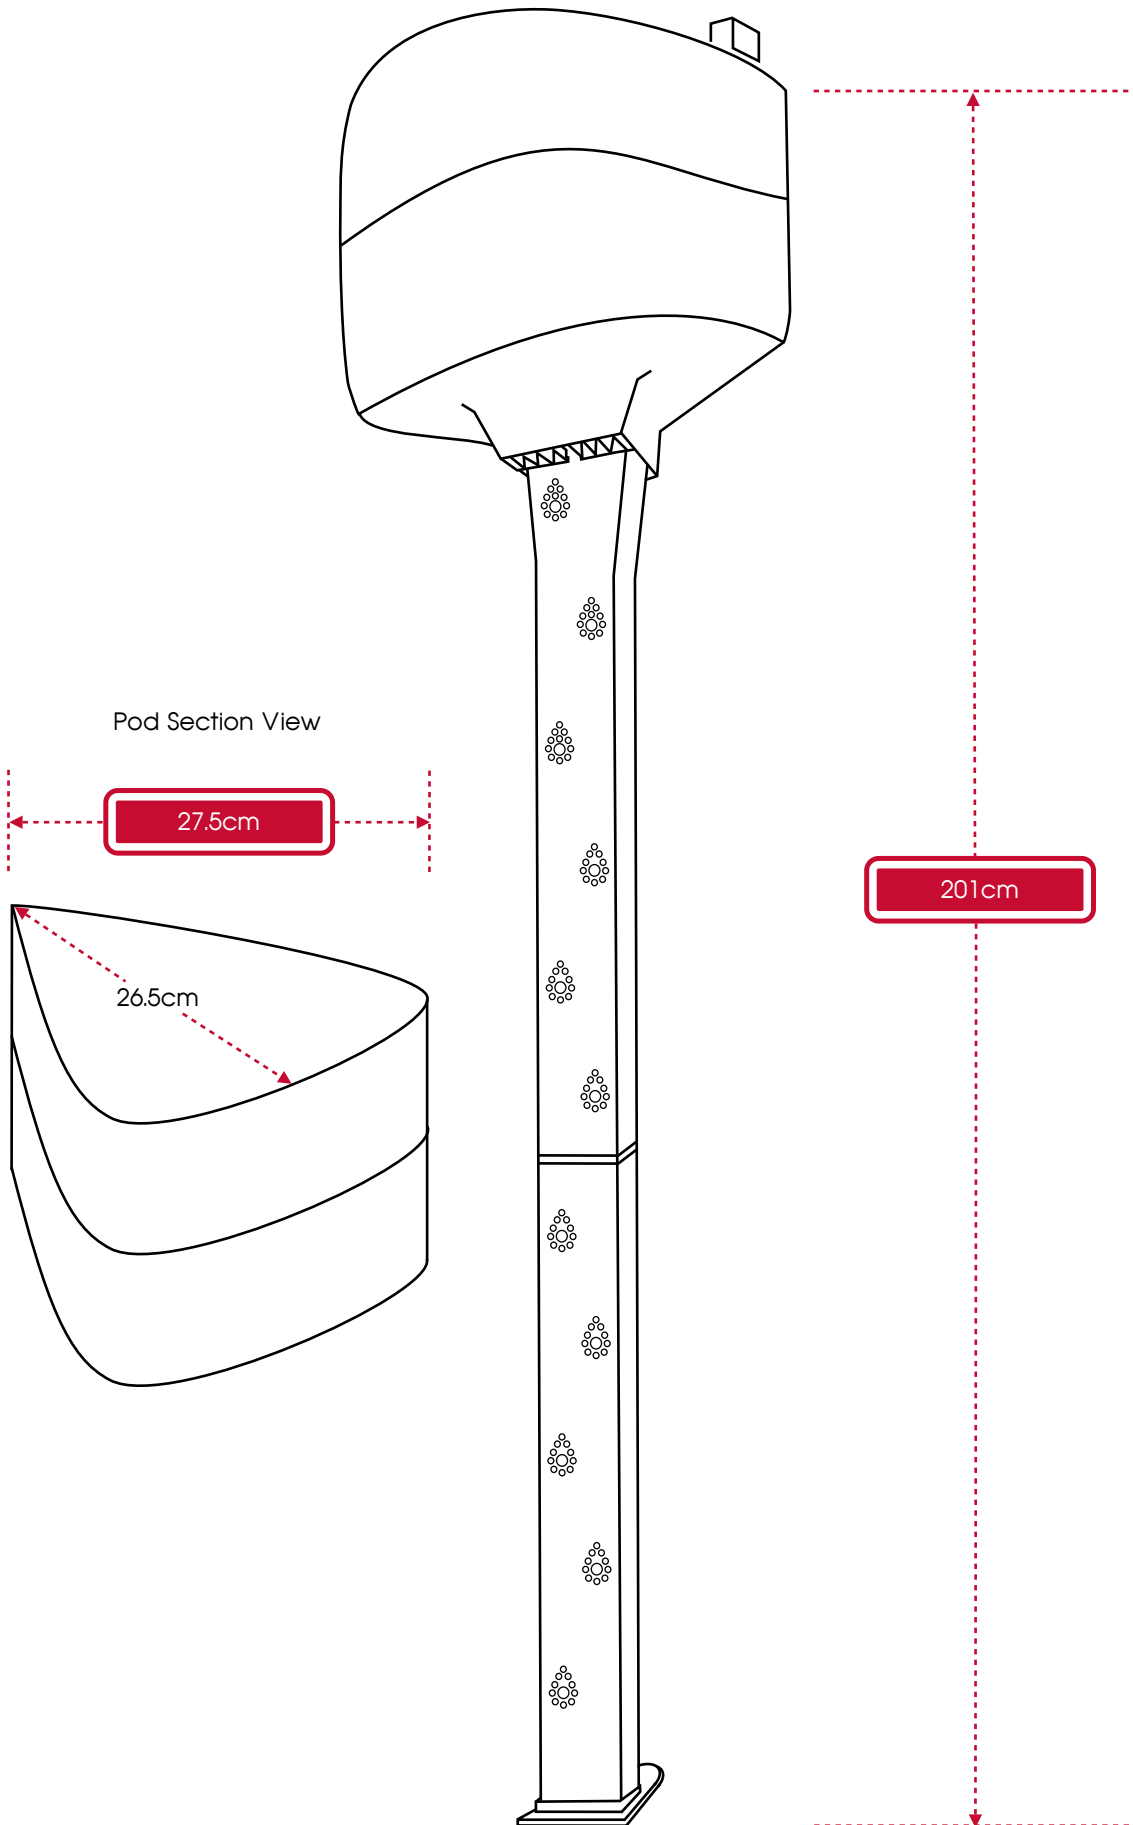

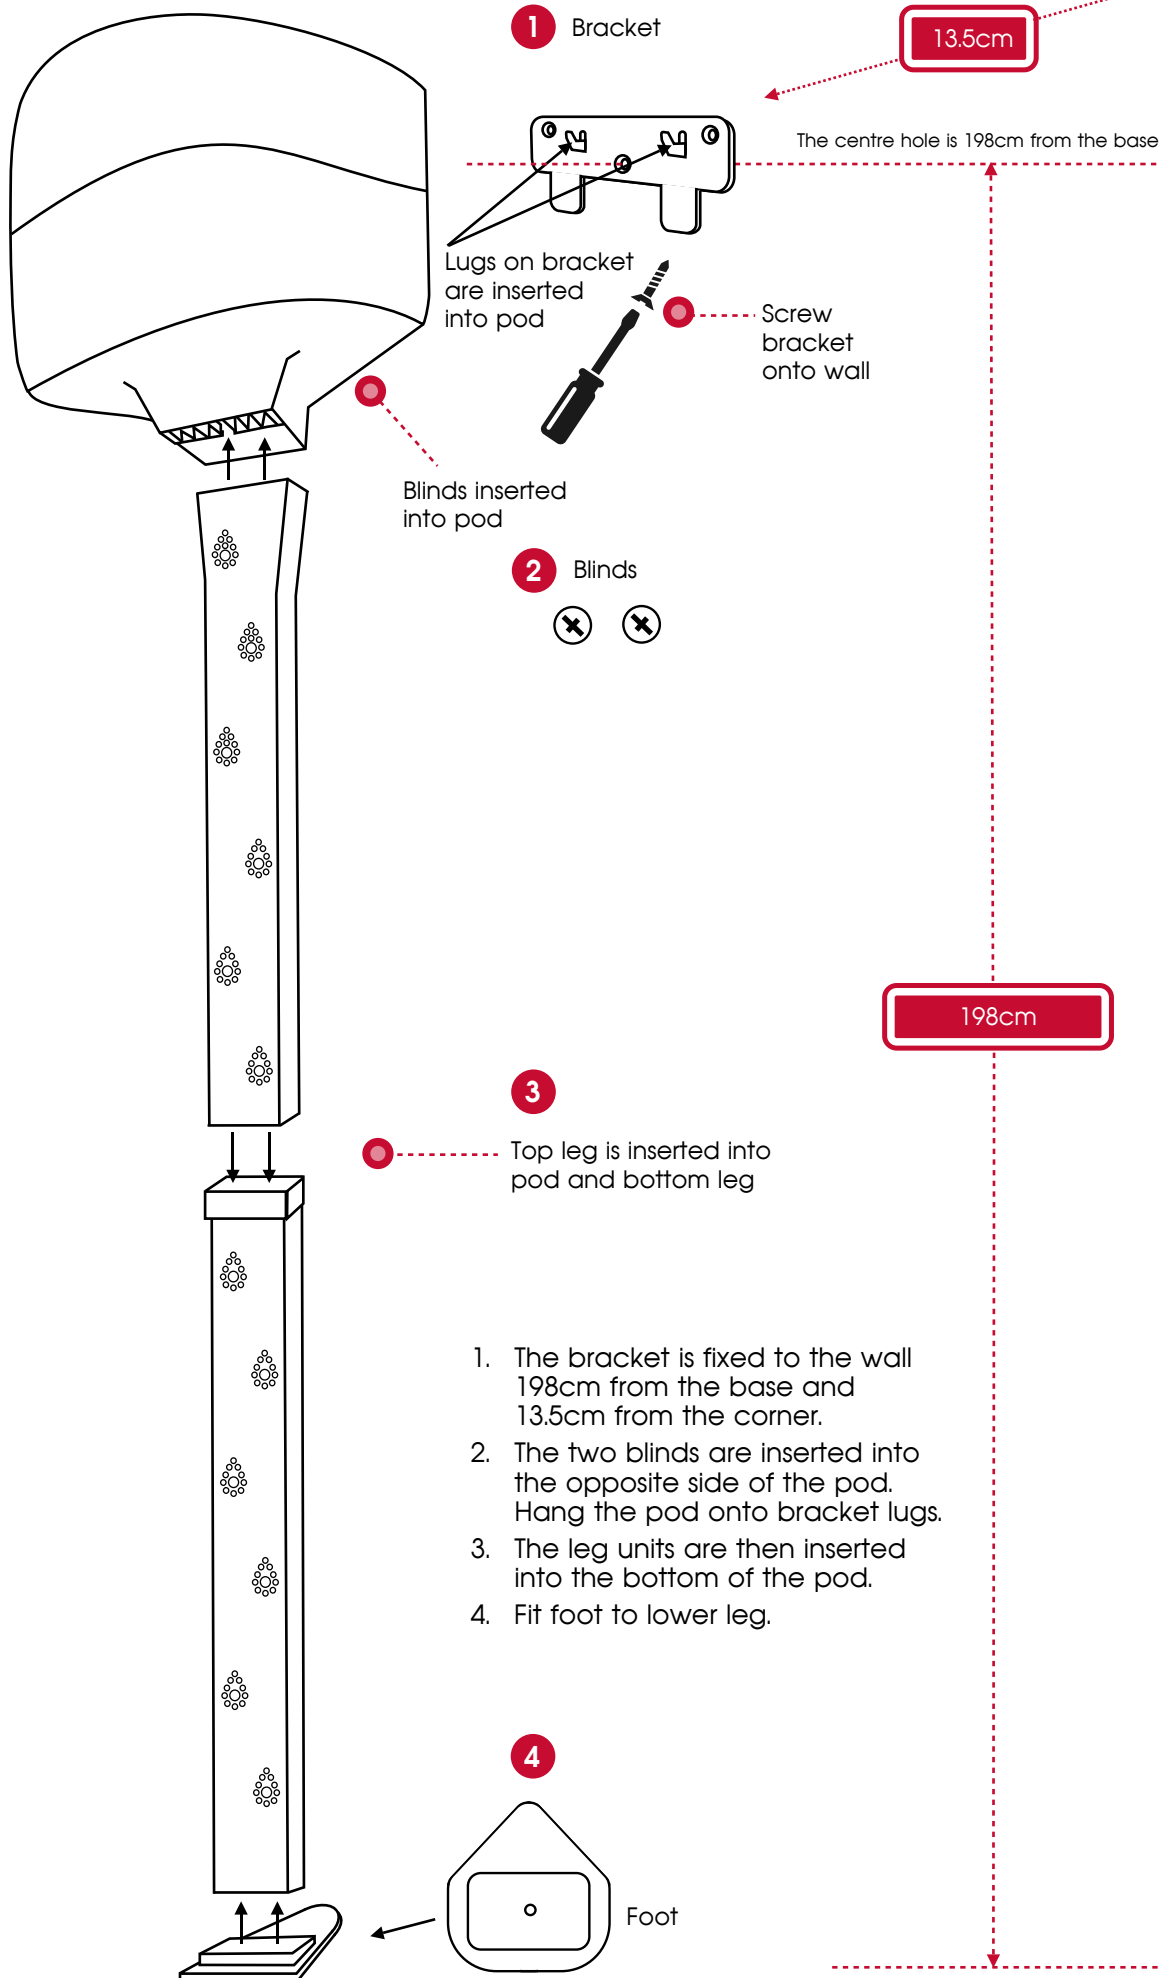

1. The bracket is fixed to the wall 198cm from the base and 13.5cm from the corner.
2. The two blinds are inserted into the opposite side of the pod. Hang the pod onto bracket lugs.
3. The leg units are then inserted into the bottom of the pod.
4. Fit foot to lower leg.



certified electrician

The Air Body dryer must be installed by a registered electrician who can certify their work with a Certificate of Compliance as being Compliant with the Nz/AS Regulations.



fixing

Non-ferrous screws should always be used to prevent corrosion.



adjustments

The length of the dryer leg can be reduced to facilitate multiple situations. The bottom leg can be reduced by a maximum of 250mm. We recommend never cutting across the tear-drop pores.






fitting the remote

Remove top cover of remote.

Position the base unit of the remote at desired location and Mark., Secure switch to wall.

Return the top cover of the remote.

The pvc connector should be inserted onto remote nozzle and pod nozzle.

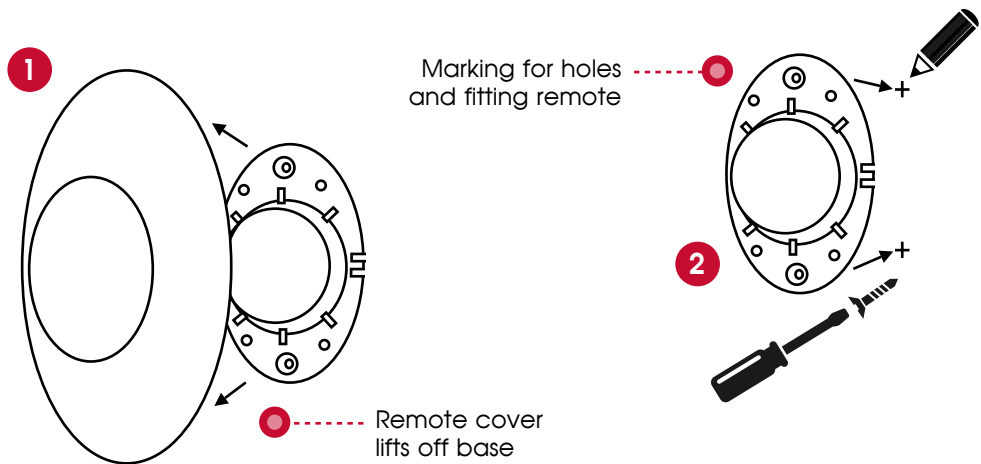

maintenance


The dryer can be wiped down with warm soapy water or any good quality detergent.

speed settings

For the best results, we recommend pressing once for a moderate speed while you shower and pressing again to increase the airflow after showering.



x1 speed

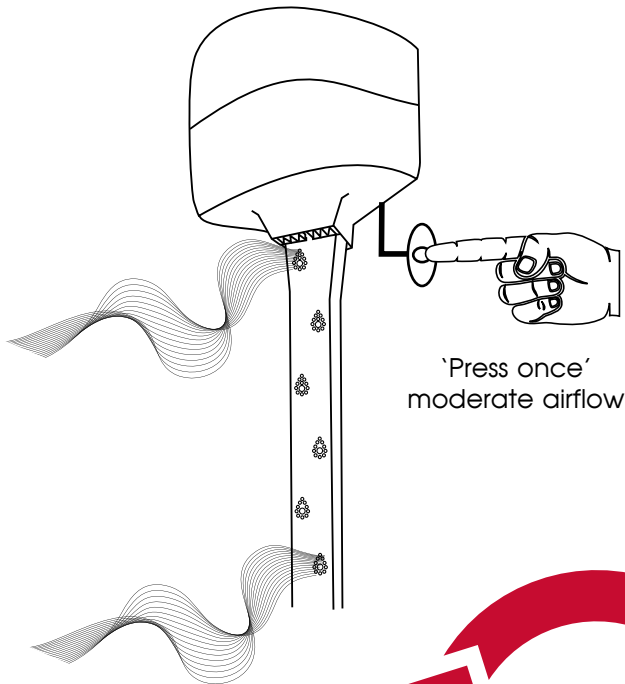


temperature


The airBody Dryer re-circulates warm air, so a change in space, for example, opening your shower door, will alter the ambient temperature.



x2 speed

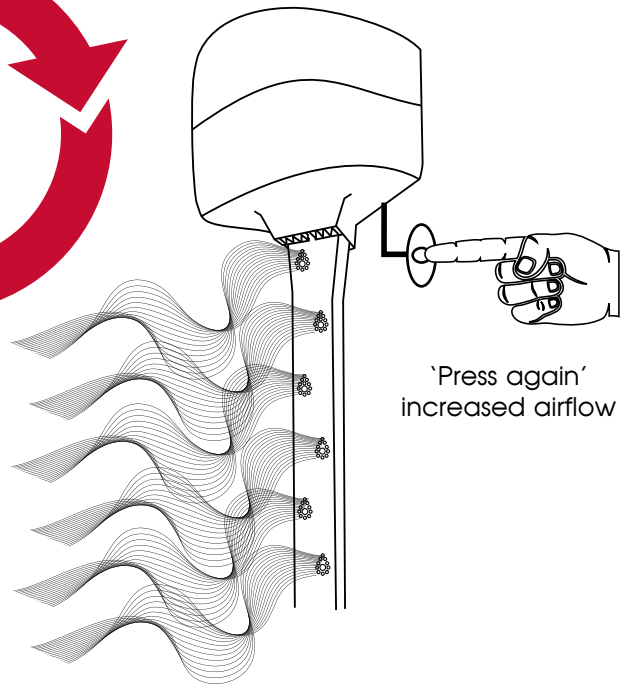

airflow off

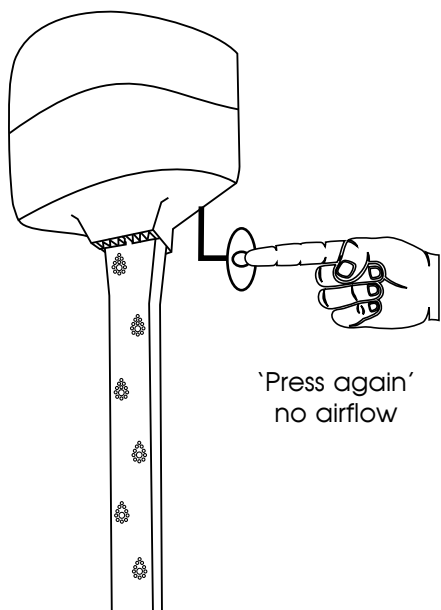

safety

Keep fingers and hands away from moving parts located in the pod.



Do not operate the dryer unless fully assembled.

Do not attempt to open the pod of the body dryer.

Only use the dryer after sufficient instruction, knowledge and supervision.

technical specifications and eu standards

Model	APRES2
Operating voltage	220/240V
Amperage	12.8 amps
Output temperature	38°C*
Unit size	201cm x 27.5cm x 26.5cm
Drying time	3 minutes
Speed function	2
Approval	CE
EU directives	2006/95/EC Low Voltage Directive 2004/108/EC EMC Directive
IP rating	IPX4

*dependent on room temperature. output temperature can be 3 - 4°C above ambient.

guarantee

Your new body dryer is guaranteed against the cost of breakdown repairs for two years from the date of the original purchase.



What is covered?

- Repairs necessary as a result of faulty materials, defective components or manufacturing defect.
- Cost of functional replacement parts.
- The labour costs of an airteem® approved repairer to carry out any repairs.

What is not covered?

- Accidental damage, misuse and abuse.
- External or appearance parts including remote, pvc remote connector, foot or legs.
- Repairs required as a result of unauthorised repair or inexperienced installation that fails to meet the requirements within this user manual.

Important notes

- The body dryer must be correctly installed, located and operated in accordance with the instructions in this user manual.



